TYPE JHB High Current Micro Fuse is designed for the purpose of external short circuit protection of the lithium ion battery of medium sizes, such as a power tool and an electric assistant bicycle.

Though it was a surface mount type, it was small and realized high current rating, because a fuse element and a terminal adopt the structure of one.

Furthermore perfectly compliant to Lead-free makes environment friendly design.

# **FEATURES**

- 1. High current rating was realized because a fuse element and a terminal adopt the structure of one.
- 2. Surface mount type and small size of 7358 (7.3  $\times$  5.8  $\times$  4.2mm).
- 3. Surface temperature rise is 75°C or less when applying rated current . This gives little influence to the peripheral units.
- 4. Alumina ceramics are adopted as a case, original structure is adopted as the inside of a case, and the safety at the time of fusing is improved. [Application classification by use : 4]
- 5. Suitable for automatic mounting
- 6. Complete lead-free

# **APPLICATION CLASSIFICATION BY USE**

The application classification by use which divided the market and use into four is set up supposing our products being used for a broad use.

Please confirm the application classification by use of each product that you intend to use.


Moreover, please be sure to inform to our Sales Department in advance in examination of the use of those other than the indicated use.

	Application classification by use	l	Recommendation Type	
Market		Outline	Typical example of application	Circuit Protection Components
High reliability apparatus	1	<ul> <li>Apparatus in which advanced safety and reliability are demanded.</li> <li>Whether failure of the Apparatus which cannot maintenance exchange products, and a product is direct for a human life, Apparatus which changes or may cause a fatal system failure.</li> </ul>	<ul> <li>Space development apparatus relation (Satellite, Rocket, Artificial Satellite)</li> <li>Aviation and a defensive system</li> <li>Atomic power, fire power, and a water-power generation system</li> </ul>	With no relevance
In-vehicle -	2	<ul> <li>Apparatus in which reliability is important.</li> <li>The apparatus in which maintenance exchange of a product is very difficult, and failure of a product influence a human life, or the range of failure is wide range.</li> </ul>	<ul> <li>Vehicles control of transport machines, such as a car, and a railroad, a vessel (Engine control, drive control, brake control)</li> <li>The operation control system of the Shinkansen and a main artery</li> </ul>	Type KAB N series Type JAG N series Type KVA N series
Industrial apparatus	3	-Apparatus which can maintenance exchange products, and apparatus in which the loss of the system failure is large although failure of a product does not influence a human life, and maintenance engineering is demanded	<ul> <li>Vehicle indoor loading parts, such as an air-conditioner and car navigation, and in-vehicle communication facility</li> <li>Security management system for home/buildings etc.</li> <li>Control apparatus, such as Industrial use robots and a machine tool etc.</li> </ul>	Type KAB M series Type JHC H series
Apparatus in general	4	<ul> <li>The small size and the thin article which applies leading-edge technology positively</li> <li>The product supposing being used widely in the market for the apparatus which can maintenance exchange products, and apparatus with a partial system failure by failure of product</li> </ul>	-Smart phone, Mobile phone, Mobile PC (tablet), Electronic dictionary - Desktop PC, Notebook PC, Home network - Amusement apparatus (Pachinko,Game machine)	Type KAB Type KAB T series Type KAH Type JAE, Type JAG Type JAH, Type JAH L series Type JHC Type KVA

# RATING

Item	Rating		
Category Temperature Range	-40 ∼+125℃		
Rated Current	30A, 40A, 50A, 60A, 80A, 100A		
Rated Voltage	35VDC, 60VDC		
Voltage Drop	Refer to CATALOG NUMBERS AND RATING.		
Insulation Resistance (between terminals and case)	1000MΩ or more		
Fusing Characteristics	Fusing within 1 minute if the current is 200% of rated current.		
Clearing Characteristics	Breaking voltage : Rated Voltage		
	Breaking Current : 300A, 600A		

# **ORDERING INFORMATION**

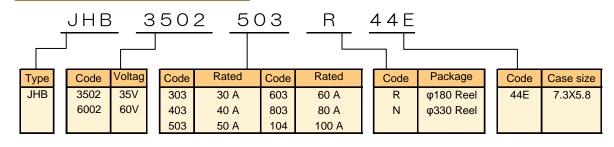

### CATALOG **NUMBERS** AND RATING

Feb. 2019

Catalog number	Case size	Rated current A	Internal resistance mΩ (Typical)	Voltage drop mV (Max.)	Rated voltage VDC	Breaking current A
JHB 3502 303 🗆 44E		30	1.77		35	
JHB 6002 303 🗆 44E		50	1.77		60	
JHB 3502 403 🗆 44E		40	1.38		35	
JHB 6002 403 🗆 44E	7.3×5.8	40	1.50	100	60	300
JHB 3502 503 🗆 44E		50	1.08	100	35	300
JHB 6002 503 🗆 44E	7.5x5.0	50	1.00		60	
JHB 3502 603 🗆 44E		60	0.85		35	
JHB 6002 603 🗆 44E		00	0.65		60	
JHB 3502 803 🗆 44E		80	0.74	120	35	600
JHB 3502 104 🗆 44E		100	0.56	120	35	000

• For the taping type, the packing code "R or N" will be entered in  $\Box$ .

· Catalog numbers are approved by UL. cUL.(File No.E170721,E480488)

## DIMENSIONS CONSTRUCTION 50 Marking JHB Empty space Ceramic case with terminal Ceramic plate ₽. Ŵ Seal resin L


Main body : Ceramic case

Terminal : Tin plating (mm)						
Case size	Case code	L	w	т	Р	
7358	44E	7.3±0.3	5.8±0.2	4.2±0.2	1.2±0.3	


# MARKING

Code : Rated current	Code : Rated current
30 : 30A	60 : 60A
40 : 40A	80 : 80A
50 : 50A	100 : 100A

# **RECOMMENDED PAD DIMENSION**




	(mm)			
	Size 7358			
а	2.7			
b	5.8			
c 4.4				
(Reflow)				

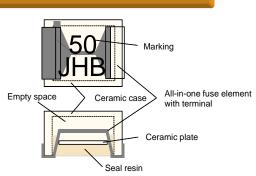

Name	Material, standard, and treatment		
All-in-one fuse element with terminal	Copper Alloy (Tin plating terminal)		
Ceramic case	Alumina ceramics		
Ceramic plate	Alumina ceramics		
Seal resin	Silicone resin		
Marking	UV curable resin		
Empty space	_		

# STANDARD TEST BOARD

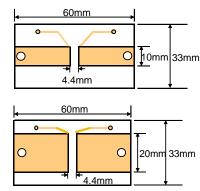


Glass epoxy body on one side Board thickness : 1.6mm Thickness of Copper layer : 400µm Rated Current: 30~50A

Glass epoxy body on one side Board thickness : 1.6mm Thickness of Copper layer : 500µm Rated Current : 60~100A


# PERFORMANCE

No	Item	Performance	Test method
1	Temperature rise	Temperature rise shall not exceed 75 $^\circ\!\!\!\mathrm{C}$	Apply rated current
2	Current-carrying capacity	Shall not open within 1 hour.	Apply 100% of rated current
3	Clearing characteristics	Arc shall not be continued. No ignition. Marking shall be legible No bursting of the fuse	Breaking voltage : Rated voltage Breaking current : 300A(30~60A)、600A(80~100A)
4	Voltage drop	Voltage drop is below the value specified in CATALOG NUMBERS AND RATING.	Apply rated current
5	Fusing characteristics	Fusing within I min.	Apply 200% of rated current (Ambient temperature: $10{\sim}30^\circ$ C)
6	Insulation resistance	1000MΩ or more	Insulation resistance between terminals and case(ceramics)
7	Electrode strength (Bending)	No mechanical damage. Resistance change after the test shall be within ± 20%.	Board supporting width : 90mm Bending speed : Approx. 0.5mm/s Duration : 5 s Bending : 3mm
8	Shear test	No mechanical damage. Resistance change after the test shall be within ± 20%.	Applied force       : 20N         Duration       : 10s         Tool       : R0.5         Direction of the press : side face
9	Core body strength	No mechanical damage. Resistance change after the test shall be within $\pm$ 20%.	Supporting dimension       : 3.65mm         Applied force       : 20N         Duration       : 10s         Tool       : R0.5         Direction of the press : thickness direction of product
10	Solderability (Solder Wetting time)	Solder Wetting time : within 3s	Solder : Sn-3Ag-0.5Cu Temperature : 245±5℃ meniscograph method
11	Solderability (new uniform coating of solder)	The dipping surface of the terminals shall be covered more than 95% with new solder.	Solder : Sn-3Ag-0.5Cu Temperature : 245±5°C Dippinng : 3s
12	Resistance to soldering heat	Marking shall be legible. No mechanical damage. Resistance change after the test shall be within ± 20%.	Dipping (1 cycle) Preconditioning : 100~150°C ∕ 60s Temperature : 265±3°C ∕ 6~7s Reflow (2 cycle) Preconditioning : Lower than 180°C 1~2min Peak : 250±5°C 5s Holding : 230~250°C 30~40s Cooling : More than 2min Manual soldering Temperature : 350±10°C Duration : 3~4s Measure after 1hour left under room temperature and humidity.
13	Solvent resistance	Marking shall be legible. No mechanical damage. No significant irregularity in the appearance.	Dipping rinse Solvent : Isopropyl alcohol Duration : 90s
14	Vibration	No mechanical damage. Resistance change after the test shall be within $\pm 20\%$ .	Frequency rage       : 10~55~10Hz/min         Vibration amplitude       : 1.5mm         Duration       : 2 hours in each of XYZ directions (total : 6 hours)
15	Shock	No mechanical damage. Resistance change after the test shall be within $\pm$ 20%.	Peak value     : 490m/s <sup>2</sup> Duration     : 11ms       6 aspects × 3 times (total: 18 times)
16	Thermal shock	No mechanical damage. Resistance change after the test shall be within $\pm$ 20%.	-55±3°C : 30min Room temperature : 2~3min or less 125±2°C : 30min Room temperature : 2~3min or less Repeat above step for 10 cycles
17	Moisture resistance	No mechanical damage. Resistance change after the test shall be within $\pm$ 20%.	Temperature         : 85±3°C           Humidity         : 85±5%RH           Duration         : 1000h
18	Load life	No mechanical damage. Resistance change after the test shall be within $\pm$ 20%.	Temperature       : 85±2°C         Applied current       : Rated current×70%         Duration       : 1000h
19	Moisture resistance load	No mechanical damage. Resistance change after the test shall be within $\pm$ 20%.	Temperature       : 85±3℃         Humidity       : 85±5%RH         Applied current       : Rated current×70%         Duration       : 1000 h
20	Stability	No mechanical damage. Resistance change after the test shall be within $\pm 20\%$ .	Temperature : 125±2℃ Duration : 1000h
_			


# **FUSING CHARACTERISTICS**

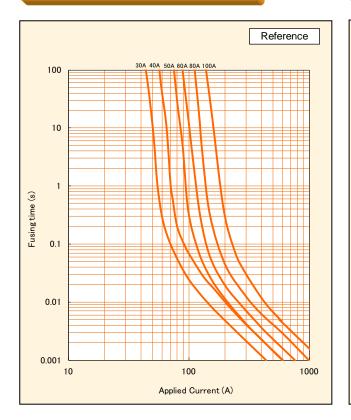


# I<sup>2</sup>T - T CHARACTERISTICS

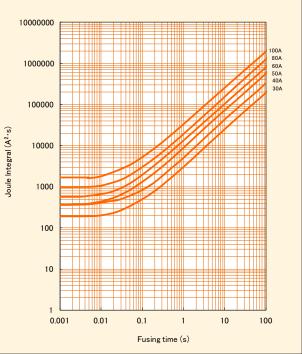

# DISTRIBUTION OF FUSING CHARACTERISTICS

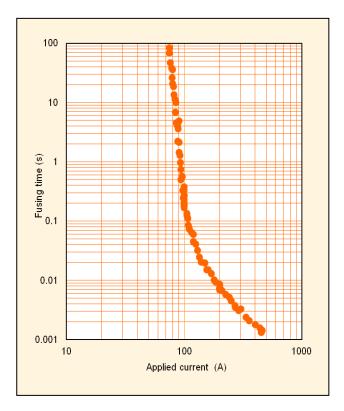

# **DISTRIBUTION OF FUSING TIME**

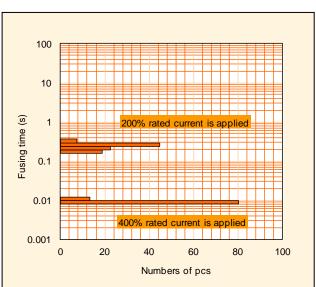

# DETERMINATION OF RATED VALUE AND SELECTION OF MICRO FUSE (TYPE JHB)

Determine the rated value of the micro fuse, and select the micro fuse for your circuit. If you select the micro fuse , safety of your circuit can be ensured.

How to determine the rated value of the micro fuse is described below:

### Flow for fuse selection

1. Measurement of circuit values using actual device

Measure the circuit values, such as operating current of the circuit.

2. Calculation from operating current

From the obtained operating current and the category temperature, calculate minimum rated value to determine the applicable fuse. 3. Calculation from overload current

From the obtained overload current, calculate the maximum rated value to determine the applicable fuse.

- 4. Calculation from inrush current
  - From the inrush current, calculate the minimum rated value to determine the applicable fuse.
- 5. Final determination of rated value

From the calculation results of steps 2 through 4, determine the rated value.

6. Operation check using actual device

After selecting the rating, confirm if the device works properly under the pre-determined conditions.

### Fuse selection

1. Measurement of circuit values using actual device

Before determining the rated value of the fuse, preliminarily measure the following condition by using the actual device.

1-1. Operating current

Using an oscilloscope or equivalents, measure operating current of the circuit.

1-2. Overload current

Using an oscilloscope or equivalents, measure the overload current that needs to break the circuit.

1-3. Inrush current

Using an oscilloscope or equivalents, measure the inrush current of circuit at power-on or power-off. In addition, determine the number of inrush current applied.

### 1-4. Category temperature

Measure the ambient temperature of the fuse circuit.

<The notes to the design of substrate wiring>

In a 25°C environment under normal circumstances, please design substrate wiring so that the surface temperature of a fuse does not exceed 80°C.

### EXAMPLE TO SELECT RATINGS OF TYPE JHB

<Fuse selection>

Effective operating current : 30 A Effective overload current : 120A Inrush current waveform : Fig. A (Pulse width : 2 ms, Wave height : 300 A) Numbers to withstand inrush current : 100,000 times Category temperature : 85°C Operating time : 4,000h

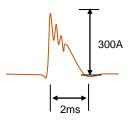


Fig. A : Inrush current waveform

### 2. Calculation from operating current

2-1. Measurement of operating current

Using an oscilloscope or equivalents, measure operating current (effective current) of the actual circuit. Example : Effective operating current = 30 A

### 2-2 Derating


(1) Temperature derating factor

Using Fig. B, find the temperature derating factor correspond to the temperature. However, in order to be allowed to check an operating condition in use to the apparatus used for a long time that the operating time exceeds 4,000 h, please ask our Sales Department.

### 2 Rated derating factor

Rated derating factor = 0.75Constant irrespective of temperature)

Use Formula 1 to calculate rated current of the fuse to be used for circuit. Rated current of fuse  $\geq$  Operating current/( $(\Im \times \mathbb{Z})$ ) ... Formula 1 Example : Category temperature = 85°C, Operating current =30 A

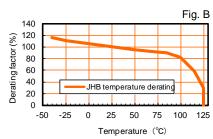

①Temperature derating factor = 0.90 (Refer to Fig. B.) ②Rated derating factor = 0.75(Constant irrespective of temperature) Calculation using Formula 1:

Rated current ≥ 30/(0.90×0.75)= 44.4A

The above calculation result shows that the fuse with rated current of 44.4A or more should be selected for this circuit. Type JHB, with <u>rated current of 50 A</u> can be selected.

## 3. Calculation from overload current

3-1 Measurement of overload current

Using oscilloscope or equivalents, measure overload current that needs to break circuit. Example : Effective overload current = 120 A

### 3-2 Calculation from overload current

Determine rated current so that overload current can be 2.0 times larger than rated current. Use Formula 2 to calculate rated current of fuse. Rated current of fuse ≤ Overload current/2.0 ... Formula 2

Example : Overload current = 120 A

Use Formula 2 to calculate the rated current.

Rated current  $\leq$  120/2.0 = 60 A

The above calculation result shows that the fuse with rated current of 60 A or less should be selected for this circuit. Type JHB, with <u>rated current of 50 A</u> can be selected.

### 4. Calculation from inrush current

4–1 Measurement of inrush current waveform Using an oscilloscope or equivalent, measure waveform of inrush current of actual circuit.

4-2 Creation of approximate waveform

Generally, waveform of inrush current is complicated. For this reason, create the approximate waveform of inrush current as shown on Fig. C to simplify calculation.

4–3 Calculation of I<sup>2</sup>t of inrush current
 Calculate I<sup>2</sup>t (Joule integral) of approximate waveform.
 The formula for this calculation depends on the approximate waveform.
 Refer to Table A.




Fig. C : Inrush current waveform Red line : Actual measurement waveform Black line : Approximate waveform

Example : Pulse applied = 2 ms, Peak value = 300 A Approximate waveform = Triangular wave Since the approximate waveform is a triangular wave, use the following formula for calculation. I<sup>2</sup>t of rush current = 1/3 × Im<sup>2</sup> × t ... Formula 3 (Im : Peak value, t : Pulse applying time) Use Formula 3 to calculate I2 I<sup>2</sup>t of the inrush current: I<sup>2</sup>t = 1/3 × 300 × 300 × 0.002 = 60 (A<sup>2</sup>s)

# JOULE-INTEGRAL VALUES FOR EACH WAVEFORM

JOULE-INTEGRAL VALUES FOR EACH WAVEFORM Table A							
Name	Waveform	l <sup>2</sup> t	Name	Waveform	l <sup>2</sup> t		
Sine wave (1cycle)	$0 \frac{1}{2} t$	$\frac{1}{2}$ Im <sup>2</sup> t	Trapezoidal wave	$0$ $t_1$ $t_2$ $t_3$ $I$ m	$\frac{\frac{1}{3}Im^{2}t_{1} + Im^{2}(t_{2}-t_{1}) + \frac{1}{3}Im^{2}(t_{3}-t_{2})$		
Sine wave ( half cycle )		$\frac{1}{2}$ Im <sup>2</sup> t	Various wave 1		$I_{1}I_{2}t + \frac{1}{3}(I_{1}-I_{2})^{2}t$		
Triangular wave		$\frac{1}{3}$ I m <sup>2</sup> t	Various wave 2	$ \begin{array}{c}  \end{array} $ $ \begin{array}{c} \end{array} $ $ \end{array} $ $ \begin{array}{c} \end{array} $ $ \begin{array}{c} \end{array} $ $ \begin{array}{c} \end{array} $ $ \end{array} $ $ \begin{array}{c} \end{array} $ $ \begin{array}{c} \end{array} $ $ \end{array} $ $ \end{array} $ $ \begin{array}{c} \end{array} $ $ \end{array} $ $ \end{array} $ $ \end{array} $ $ \begin{array}{c} \end{array} $ $ \end{array} $ $ \end{array} $ $ \end{array} $ $ \begin{array}{c} \end{array} $ $ \end{array} $ $ \end{array} $ $ \end{array} $	$\begin{array}{c} \frac{1}{3} I_1^2 t_1 + \{I_1 I_2 + \frac{1}{3} (I_1 - I_2)^{-2}\} \\ (t_2 - t_1) + \frac{1}{3} I_2^2 (t_3 - t_2) \end{array}$		
Rectangular wave	O t	I m² t	Charge/ discharge waveform	$I = I m e^{-t/\tau}$ 0.368 I m 0 $\tau$ -t	<u>-1</u> I m <sup>2</sup> τ		


 $^{\ast}$  Following formula is generally used for calculation of  $I^{2}t$  as i(t) equal to current.

 $I^2 t = \int_0^t i^2 (t) dt$ 

4-4 Search of load ratio

- ①Set up number of cycles to withstand. (generally 100,000 times)
- ②Obtain load ratio from Pulse resistance characteristics. (Fig. D)
- Example : 100,000 times is required against inrush current applied.
  - The load ratio is 35% or less from Fig. D.

# PULSE RESISTANCE CHARACTERISTICS

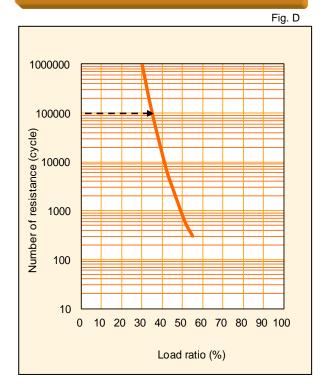

### 4-5 Calculation from Joule integral and load ratio

Use Formula 4 to calculate the standard  $\mbox{I}^2 t$  for the fuse to be used.

Example :  $I^2t$  of pulse = 60 A2s,

Pulse applied = 2 ms, Required load ratio = 35% From Formula 4,

2

Standard  $I^{2}t$  of fuse > 60/0.35 = 171.4 (A2s)

The standard  $l^2t$  of the fuse should be 171.4 (A2s) or more. Since the rush pulse applied is 2 ms, obtain the intersection of 2 ms (horizontal axis) and 171.4 A2s (vertical axis) from Fig.

 ${\sf E}$  (refer to the arrow shown in Fig. E).

Select a fuse whose curve is above the intersection. Type JHB with <u>rated current of 50 A</u> should be selected.

### 5. Final determination of rated value


Determine the rated current of micro fuse. Rated current should meet all the calculation results.

Example : Rated current of 50 A meets the all requirement.

### 6. Operation check using actual device

After selecting rating, confirm if the device works properly under pre-determined conditions.

# JOULE INTEGRAL VS. FUSING TIME

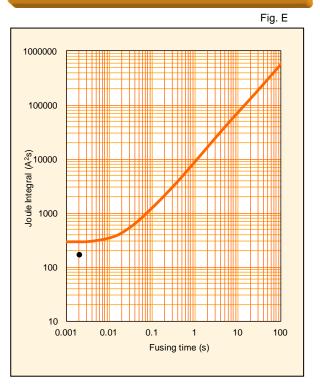

# **Application Notes for Micro Fuse**

### 1. Circuit Design

HIGH CURRENT MICRO FUSE should be designated only after confirming operating conditions and Micro Fuse characteristics

When determining the rated current, be sure to observe the following items :

- (1) Type JHB should always be operated below the value considered in the rated derating rate and temperature derating rate for rated current.
- (2) Type JHB should always be operated below the rated voltage.
- (3) TYPE JHB should be selected with correct rated value to be fused at overload current.
- (4) When TYPE JHB are used in inrush current applications, please confirm sufficiently inrush resistance of Micro Fuse.
- (5) Please do not apply the current exceeding the breaking current to TYPE JHB. In addition, I would like confirmation beforehand not to have possibilities to cut if off normally when you uses it by a high inductance circuit.
- (6) Use TYPE JHB under the condition of category temperature.
- (7) TYPE JHB should not be used in the AC power source and primary power source.
- (8) TYPE JHB should be selected by determining the operating conditions that will occur after final assembly, or estimating potential abnormalities through cycle testing.
- (9) In a 25 °C environment under normal circumstances, please design substrate wiring so that the surface temperature of a fuse does not exceed 80 °C.

And, please use after checking that turn on operating current and overload current by an actual substrate in advance, and it is satisfactory.

### 2. Assembly and Mounting

- During the entire assembly process, observe Micro Fuse body temperature and the heating time specified in the performance table. In addition, observe the following items :
- (1) Mounting and adjusting with soldering irons are not recommendable since temperature and time control is difficult.
- (2) Once Micro Fuse mounted on the board, they should never be remounted on boards or substrates.
- (3) During mounting, be careful not to apply any excessive mechanical stresses to TYPE JHB.

### 3. Solvents

For cleaning of Micro Fuse, immersion in isopropyl alcohol for 90 seconds (at 20 ~ 30°C liquid temp.) will not be damaged. If organic solvents (Pine Alpha<sup>™</sup>, Techno Care<sup>™</sup>, Clean Through<sup>™</sup>, etc.) will be applied to TYPE JHB, be sure to preliminarily check that the solvent will not damage TYPE JHB .

### 4. Ultrasonic Cleaning

Ultrasonic cleaning is not recommended for TYPE JHB. This may cause damage to TYPE JHB such as broken terminals which results in electrical characteristics effects, etc. depending on the conditions.

### 5. Caution During Usage

(1) TYPE JHB with electricity should never be touched. TYPE JHB with electricity may cause burning due to TYPE JHB high temperature. Also, in case of touching TYPE JHB without electricity,

please check the safety temperature of TYPE JHB.

(2) Protective eye glasses should always be worn when performing fusing tests.

However, there is a fear that TYPE JHB will explode during test. During fusing tests, please cover particles not to fly outward from the board or testing fixture. Caution is necessary during usage at all times.

### 6. Environmental Conditions

- (1) TYPE JHB should not be stored or operated in the presence of acids, or alkalis, or corrosive atomosphere.
- (2) TYPE JHB should not be vibrated, shocked, or pressed excessively.
- (3) TYPE JHB should not be operated in a flammable or explosive atmosphere.
- (4) TYPE JHB should not be used under dew condensation environment.

### 7. Emergency

In case of fire, smoking, or offensive odor during operation, please cut off the power in the circuit or pull the plug out.

### 8. Storage

(1) TYPE JHB should be stored at room temperature (-10°C ~+40°C) without direct sunlight. TYPE JHB should not be stored in corrosive atmosphere such as H<sub>2</sub>S (hydrogen sulfide) or SO<sub>2</sub>(sulfur dioxide) . Direct sunlight may cause decolorization and deformation of the exterior and taping.

Also, there is a fear that solderability will be remarkably lower in high humidity.

- (2) If the products are stored for an extended period of time, please contact Matsuo Sales Department for recommendation. The longer storage term causes packages and tapings to worsen. If the products are stored for longer term. please contact Matsuo Sales Department for advice.
- (3) The products in taping, package, or box should not be given any kind of physical pressure. Deformation of taping or package may affect automatic mounting.

### 9. Disposal

When TYPE JHB are disposed of as waste or "scrap", they should be treated as "industrial waste".

### 10.Samples

TYPE JHB received as samples should not be used in production applications. A sample is provided for the special use (in such cases as the one for the form sample, the electriccharacteristic confirmation)

### m MATSUO ELECTRIC CO., LTD.

Please feel free to ask our sales department for more information on Micro Fuse.

**Overseas Sales** Head office URL

5-3,3-Chome, Sennari-cho, Toyonaka-shi, Osaka 561-8558, Japan 5-3,3-Chome, Sennari-cho, Toyonaka-shi, Osaka 561-8558, Japan http://www.ncc-matsuo.co.jp/

Tel:06-6332-0883 Eax:06-6332-0920 Tel:06-6332-0871 Fax:06-6331-1386

The specifications on this catalog are subject to change without prior notice. Please inquire of